


# Post Mounting Instructions for Historical markers

## Post Installation

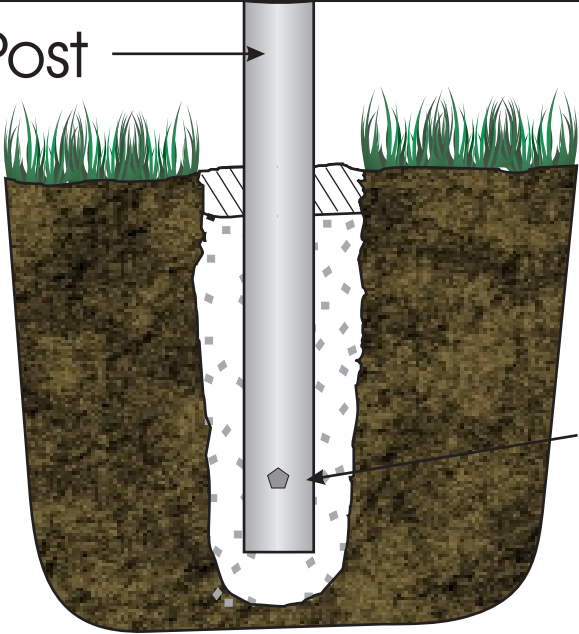

Marker Post

Use bolt in round post to keep from spinning

Dig post hole 24" to 30" deep. Set post in hole, add 80 pounds of ready-mix concrete. Check for levelness & tamp concrete. Fill hole with dirt until level with ground.

CALL ME ANYTIME ON MY CELL  
502-773-5419 JOHN SHIRCLIFFE  
AND I WILL BE GLAD TO HELP!




THE QUALITY OF THIS LAYOUT DOES NOT DETERMINE THE FINISHED PRODUCT. IT IS STRICTLY INTENDED FOR EMAIL, WEB AND PRINT OUT PURPOSES ONLY. ACTUAL COLORS MAY DEVIATE FROM ORIGINALS.

CLIENT SIGNATURE \_\_\_\_\_ DATE \_\_\_\_\_

\*THIS IS AN ORIGINAL DESIGN, CREATED FOR OUR PROPRIETARY USE IN CONNECTION WITH A PROJECT BEING PLANNED FOR YOU BY BSGN GROUP. THIS RENDERING / PRINT IS NOT TO BE SHOWN TO ANYONE OUTSIDE OF YOUR ORGANIZATION, NOR IS IT TO BE REPRODUCED, COPIED OR EXHIBITED IN ANY FASHION. BSGN GROUP RESERVES THE RIGHT TO CHARGE FOR CREATIVE TIME INVOLVED IN THE PRODUCTION OF THIS DESIGN.\*

812.949.7446 | [bottomsign.com](http://bottomsign.com) |  888.561.0007 | [eaglesign.com](http://eaglesign.com)

PLEASE PROOF READ CAREFULLY. THE CUSTOMER IS RESPONSIBLE FOR ANY ERRORS AFTER THE APPROVAL PROCESS.

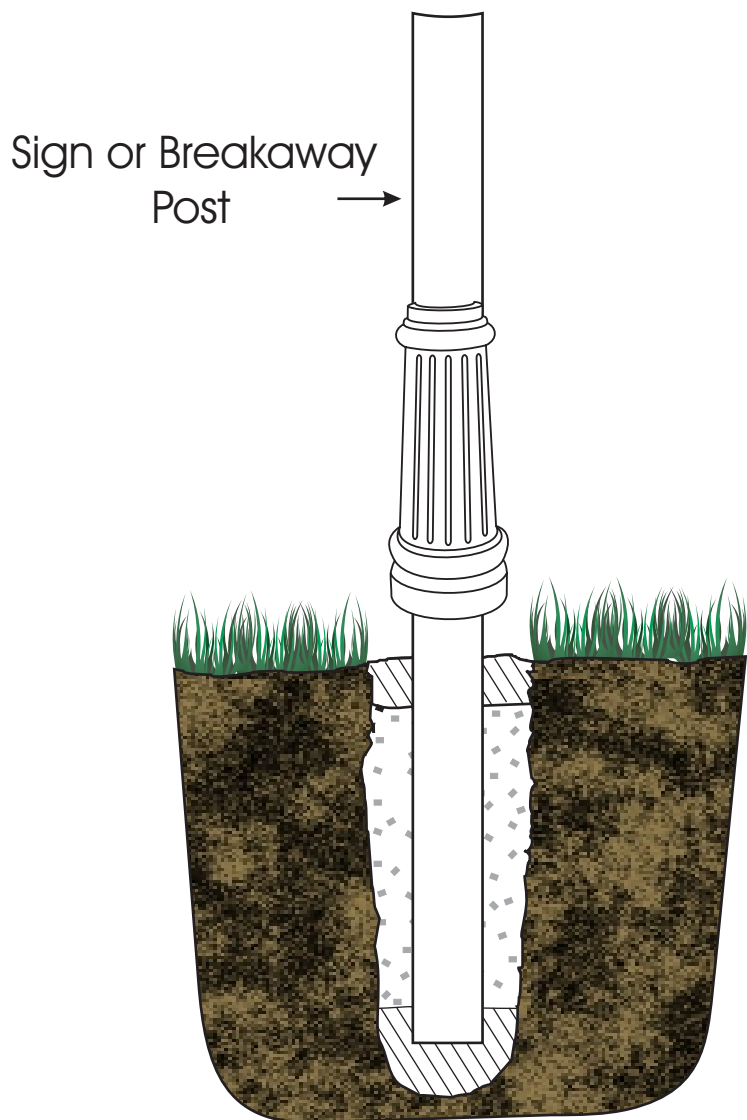

Dig post hole 20" to 24" deep. Set post in hole, add 40 pounds of concrete. Check for levelness & tamp concrete. Fill hole with dirt until level with ground.